

CODING REMOTES

USING AN EXISTING CODED REMOTE

1. Be within 3 Meters of your gates or door
2. Take a remote that has **ALREADY** been coded to the gate
3. Test to make sure it is working.
4. Locate the secret switch position

*On the older remotes this is indicated by a small hole next to the **DITEC** name*

On newer remotes the hole is located in the centre of the buttons

5. Using a pin or paperclip push the secret switch **for 5 seconds** until the red light on the remote lights
6. Within **10 Seconds** –press the button on the **NEW REMOTE** you want to operate the gate or door **ONCE ONLY**.
7. Wait for **10 seconds** for receiver to reset & test

CODING DIRECT TO RECEIVER

1. Open the control box & locate the receiver - Ensure that jumper JR6 on the receiver board is on
2. Press the black PRG button for 5 seconds - Press the button on the new remote you wish to activate the device for 1 second
3. Wait for **10 seconds** for receiver to reset & test

*If coding fails this could be because the receiver **MEMORY** is full **DELETE** all remotes & start again*

DELETING CODES

GATE

1. Press the little black program button (inside MOTOR BOX) until seeing the red light flashing slowly and release.
2. Press the button again until you see the light flashing really fast - release
3. Wait for **10 seconds** for receiver to reset & test

GARAGE

Repeat for the garage door if fitted

The program button for garage should be in a ADD-ON receiver

WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:
- Battery is hazardous: NEVER allow children near batteries.
- If battery is swallowed, immediately notify a doctor.
To reduce risk of fire, explosion or chemical burn:
- Replace **ONLY** with the same size and type battery
- **DO NOT** recharge, disassemble, heat above 100° C or incinerate
Battery will cause **SEVERE** or **FATAL** injuries in 2 hours or less if swallowed or placed inside any part of the body.

