

Elsema 301 Replacement Remote

1. Remove your original remotes battery cover to reveal 12 little switches
2. Unscrew the back of the new remote to reveal the same 12 switches
3. Change the new remotes switches to match the old remote
4. Close both remotes and test

Please note: After copying the switches, if the remotes does not operate the door, please try the switches on the new remote in reverse (Position of switch 12 on the old remote will be the position of switch 1 on the new remote, position of switch 11 on the old remote will be the position of switch 2 on the new remote etc)



Elsema 301 Replacement Remote

1. Remove your original remotes battery cover to reveal 12 little switches
2. Unscrew the back of the new remote to reveal the same 12 switches
3. Change the new remotes switches to match the old remote
4. Close both remotes and test

Please note: After copying the switches, if the remotes does not operate the door, please try the switches on the new remote in reverse (Position of switch 12 on the old remote will be the position of switch 1 on the new remote, position of switch 11 on the old remote will be the position of switch 2 on the new remote etc)

