

Herculift Replacement Remote

1. Locate the 'Control Panel' on the garage motor.
This will be a series of buttons usually located under the light cover of the motor.
2. Remove the light cover to access the buttons.
3. Press and release the button labelled 'Learn' (see examples below). A red light should illuminate.
4. Press the button on the new remote you wish to operate your door, two times.
5. Once the red light on the motor stops flashing, your new remote is now programmed.



Herculift Replacement Remote

1. Locate the 'Control Panel' on the garage motor.
This will be a series of buttons usually located under the light cover of the motor.
2. Remove the light cover to access the buttons.
3. Press and release the button labelled 'Learn' (see examples below). A red light should illuminate.
4. Press the button on the new remote you wish to operate your door, two times.
5. Once the red light on the motor stops flashing, your new remote is now programmed.

