

4 Channel

Merlin - TRANSMITTER



CODE TYPE

Smart button technology - each with pre-programmed buttons.

CHANNELS

4 available channels per programmed transmitter (all with smart button technology)

KIT CONTAINS

- 1 x transmitter
- 1 x 12 Volt Alkaline battery

DESCRIPTION

This four channel keyring transmitter is a light weight transmitter that is small enough to fit on your car keyring.

The four channels allow for use on multiple garage doors.

HOW TO

HOW TO PROGRAM INTO THE OPENER

1. Press the learn button for 1-2 seconds
2. Press the desired remote control button twice

SPECIFICATIONS

FREQUENCY

433MHz

SUITS

All Motors after 2001 except Evo series

Remote:

M832
M834
M842
M844
230T
430R

HOW TO FIND THE LEARN BUTTON

On overhead door openers

With 5 exposed terminal screws at rear:
Remove the small black cover to the right of the screws. The red button under the black cover is the 'learn' button

With 4 terminal screws at rear, possibly covered:

Remove the lamp cover
Remove the red or green control panel cover
Find the small button marked 'learn'

With 4 covered terminal screws at rear and a wall switch:
The small button on the wall switch is the learn button.

On roller door openers

With single small square red button on the front:
Remove the lamp cover and remove the small black cover. 'learn' is the red button under the black cover.

With large red or green push-switch on the front:
Remove the red/green control panel cover
Find the small button marked 'learn'.

With large red/green push switch on front and wall switch:
The small button on the wall switch is the 'learn' button.

Motors Tools & More

PLEASE KEEP YOUR ORIGINAL ENVELOPE FOR RETURNS

4 Channel

Merlin - TRANSMITTER



CODE TYPE

Smart button technology - each with pre-programmed buttons.

CHANNELS

4 available channels per programmed transmitter (all with smart button technology)

KIT CONTAINS

- 1 x transmitter
- 1 x 12 Volt Alkaline battery

DESCRIPTION

This four channel keyring transmitter is a light weight transmitter that is small enough to fit on your car keyring.

The four channels allow for use on multiple garage doors.

HOW TO

HOW TO PROGRAM INTO THE OPENER

1. Press the learn button for 1-2 seconds
2. Press the desired remote control button twice

SPECIFICATIONS

FREQUENCY

433MHz

SUITS

All Motors after 2001 except Evo series

Remote:

M832
M834
M842
M844
230T
430R

HOW TO FIND THE LEARN BUTTON

On overhead door openers

With 5 exposed terminal screws at rear:
Remove the small black cover to the right of the screws. The red button under the black cover is the 'learn' button

With 4 terminal screws at rear, possibly covered:

Remove the lamp cover
Remove the red or green control panel cover
Find the small button marked 'learn'

With 4 covered terminal screws at rear and a wall switch:
The small button on the wall switch is the learn button.

On roller door openers

With single small square red button on the front:
Remove the lamp cover and remove the small black cover. 'learn' is the red button under the black cover.

With large red or green push-switch on the front:
Remove the red/green control panel cover
Find the small button marked 'learn'.

With large red/green push switch on front and wall switch:
The small button on the wall switch is the 'learn' button.

Motors Tools & More

PLEASE KEEP YOUR ORIGINAL ENVELOPE FOR RETURNS