4 Channel

Nice - TRANSMITTER



CODE TYPE

Smart button technology - each with pre-programmed buttons.

CHANNELS

4 available channels per programmed transmitter (all with smart button technology)

KIT CONTAINS

1 x transmitter

1 x 12 Volt Alkaline battery

DESCRIPTION

HOW TO

This four channel keyring transmitter is a light weight transmitter that is small enough to fit on your car keyring.

Coding directly to the receiver

- 1. Press the learning button on your receiver for a mement. the LED will turn on for 5 seconds. Within 5 seconds, complete the next step.
- 2. Press a button on your new transmitter until the LED on your receiver turns off.
- 3. Release the transmitter key and wait for 2 seconds.
- 4. Press the same button your new transmitter again. The LED on your receiver will now flash 3 times. This indicates that your remote has been successfully coded. If this does not happen, repeat the wole procedure from the beginning, and try again.
- 5. Wait 5 seconds. Press the button on your new remote to test if it opens your garage/gate.

NOTE: To remove a single transmitter's code or all transmitter codes please refer to your receiver manual.

Motors Tools & More

4 Channel

Nice - TRANSMITTER



CODE TYPE

Smart button technology - each with pre-programmed buttons.

CHANNELS

4 available channels per programmed transmitter (all with smart button technology)

KIT CONTAINS

1 x transmitter

1 x 12 Volt Alkaline battery

DESCRIPTION

HOW TO

This four channel keyring transmitter is a light weight transmitter that is small enough to fit on your car keyring.

Coding using an existing remote

- 1. Press the button on the new transmitter for at least 5 seconds and then release.
- 2. Press the button on the already programmed transmitter 3 times slowly.
- 3. Press the button on the new transmitter slowly and then release.

Coding directly to the receiver

- 1. Press the learning button on your receiver for a mement. the LED will turn on for 5 seconds. Within 5 seconds, complete the next step.
- 2. Press a button on your new transmitter until the LED on your receiver turns off.
- 3. Release the transmitter key and wait for 2 seconds.
- 4. Press the same button your new transmitter again. The LED on your receiver will now flash 3 times. This indicates that your remote has been successfully coded. If this does not happen, repeat the wole procedure from the beginning, and try again.
- 5. Wait 5 seconds. Press the button on your new remote to test if it opens your garage/gate.

NOTE: To remove a single transmitter's code or all transmitter codes please refer to your receiver manual.

Motors Tools & More